



- Formula Home**
  - **Beam Theory**
    - Euler Beam Equation
    - Symbol Definition
    - Sign Convention
  - **Beam Calculators**
    - Cantilevers
      - End Load
      - Uniform Load
      - Triangular Load
      - End Moment
      - Intermediate Load
    - Simply Supported
    - Mixed Supported
  - **X-Section Data**
    - Standard I-Beams
    - Other Shapes
  - **Material Data**
    - Elastic Modulii
  - **Resources**
    - Bibliography
- 
- **Trade Publications**
    - R & D
    - appliance DESIGN
    - Injection Molding ★
    - Machine Design
    - Assembly
    - Quality Magazine ★
    - more**
- 
- ▶ **Login**

Home
Membership
Store
Forum
Search Member
Calculators

Materials

Design

Processes

Units

Formulas

Math

### Sponsored Links

Ads by Google

[Angle steel, angle iron](#)

Export Steel Products Angle steel, angle iron  
www.metal-china.cn/

[Flange Skilllets](#)

Keep Your Fingers! Flange Insertion Tool For Hand & Finger Safety.  
www.FlangeSkilllets.com


[Directional Audio](#)

Focus audio direct to your target without disturbing nearby persons.  
www.panphonics.com

[CAMBCO Cambering Machines](#)

The Original Machine - Since 1984 Call for a Quote!  
www.cambcoinc.com

### Beam Diagram and Calculator Input

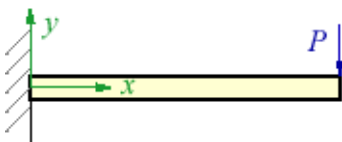

Here we display a specific beam loading case. Integrated into each beam case is a calculator that can be used to determine the maximum displacements, slopes, moments, stresses, and shear forces for this beam problem. Note that the maximum stress quoted is a positive number, and corresponds to the largest stress magnitude in the beam. It does not distinguish between tension or compression (this distinction depends on which side of the beam's neutral plane your *c* input corresponds).

#### Calculator Input

Length of beam, *L*:

Load on end of beam, *P*:


[Young's Modulus, \*E\*](#):

Distance from neutral axis to extreme fibers, *c*:

[Moment of Inertia, \*I\*](#):

[Go To Solutions](#) ⇒ [Max Stress](#) [Displacement](#) [Slope](#) [Moment](#) [Shear](#)


## Displacement

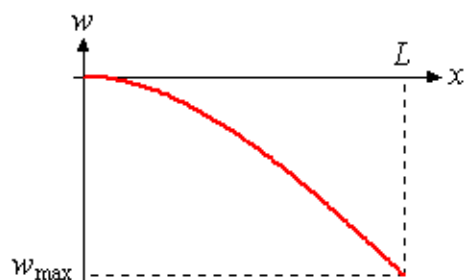

$$w(x) = -\frac{Px^2(3L-x)}{6EI}$$

$$w_{\max} = w(L) = -\frac{PL^3}{3EI} = -0.199 \text{ in}$$


## Slope

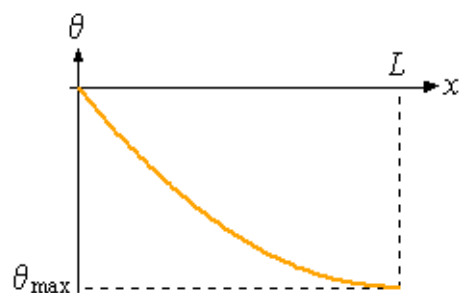

$$\theta(x) = -\frac{P(2L-x)x}{2EI}$$

$$\theta_{\max} = \theta(L) = -\frac{PL^2}{2EI} = -0.0713 \text{ deg}$$

## Moment and Maximum Bending Stress

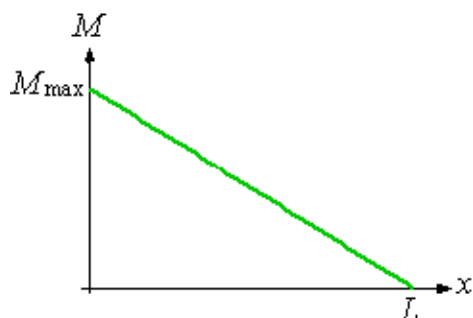


$$M(x) = P(L-x)$$

$$M_{\max} = M(0) = PL = 2.40 \times 10^4 \text{ lbf-ft} \quad \text{lbf-ft} \quad \text{Calc. Again}$$

$$\sigma_{\max} = |M_{\max}| \frac{c}{I} = \left| \frac{PL}{Z} \right| = 2800 \text{ psi} \quad \text{psi}$$

## Shear

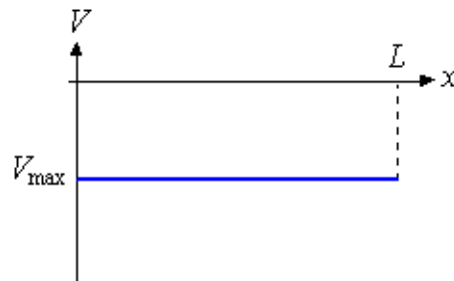

$$V(x) = -P$$

$$V_{\max} = V(x) = -P = -1200 \text{ lbf} \quad \text{lbf} \quad \text{Calc. Again}$$

Ads by Google

### [Steel Building Website](#)

Steel Building Industry Directory Help for Designing Steel Buildings  
www.DesignandBuildwithMetal.com

### [Directional Audio](#)

Focus audio direct to your target without disturbing nearby persons.  
www.panphonics.com

### [Sanxin Steel Tube](#)

High quality steel tubes from China, post your offer now!  
www.cnsteeltubes.com

### [Pipe Flow Software 2009](#)

Calc Flow Rate & Pipe Pressure Drop Free Trial, Download Pipe Flow Now!  
www.PipeFlow.co.uk

[Home](#) [Membership](#) [About Us](#) [Privacy](#) [Disclaimer](#) [Contact](#) [Advertise](#)

Copyright © 2010 eFunda, Inc.