



- Formula Home**
- **Beam Theory**
 - Euler Beam Equation
 - Symbol Definition
 - Sign Convention
- **Beam Calculators**
 - Cantilevers
 - End Load
 - Uniform Load
 - Triangular Load
 - End Moment
 - Intermediate Load
 - Simply Supported
 - Mixed Supported
- **X-Section Data**
 - Standard I-Beams
 - Other Shapes
- **Material Data**
 - Elastic Moduli
- **Resources**
 - Bibliography
- **Trade Publications**
 - Power Magazine
 - Paint & Coatings
 - Equipment World
 - Medical Design
 - Maintenance Tech
 - Industrial Maintenance
 - [more](#)
- ▶ **Login**

Home	Membership	Store	Forum	Search Member	Calculators
Materials	Design	Processes	Units	Formulas	Math

Sponsored Links

Ads by Google

[Tube Beam](#)

Special geometries in steel up to 15m, from producer
www.montanstahl.de

[INTAB Workshop, Munich](#)

Workshop on Composite Bridges with Integral Abutments (spring 2010)
www.BridgeDesign.de


[Water Barrier](#)

Let us help you save time and money on construction dewatering!
www.hydrologicalsolutions.com

[Pipestress Software](#)

4D Pipestress, static, dynamic Piping design & stress analysis 3D
www.cea-int.com

Beam Diagram and Calculator Input

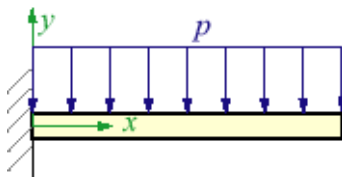

Here we display a specific beam loading case. Integrated into each beam case is a calculator that can be used to determine the maximum displacements, slopes, moments, stresses, and shear forces for this beam problem. Note that the maximum stress quoted is a positive number, and corresponds to the largest stress magnitude in the beam. It does not distinguish between tension or compression (this distinction depends on which side of the beam's neutral plane your *c* input corresponds).

Calculator Input

Length of beam, *L*:

[Line pressure load on beam, *p*](#):


[Young's Modulus, *E*](#):

Distance from neutral axis to extreme fibers, *c*:

[Moment of Inertia, *I*](#):

[Go To Solutions](#) ⇒ [Max Stress](#) [Displacement](#) [Slope](#) [Moment](#) [Shear](#)


Displacement

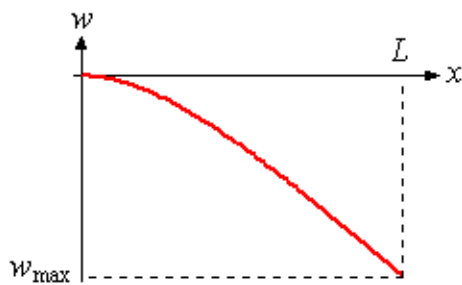

$$w(x) = -\frac{p x^2 (6 L^2 - 4 x L + x^2)}{24 EI}$$

$$w_{\max} = w(L) = -\frac{p L^4}{8 EI} = -0.00933 \text{ in}$$


Slope

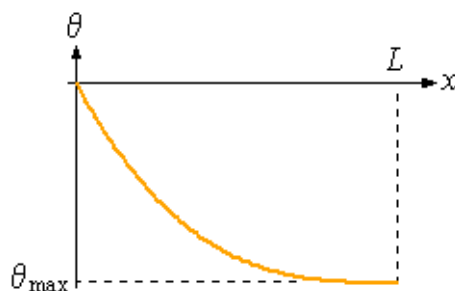

$$\theta(x) = -\frac{p x (3 L^2 - 3 x L + x^2)}{6 EI}$$

$$\theta_{\max} = \theta(L) = -\frac{p L^3}{6 EI} = -0.00594 \text{ deg}$$

Moment and Maximum Bending Stress

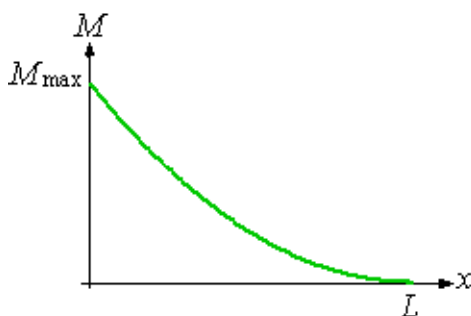


$$M(x) = \frac{1}{2} p (L - x)^2$$

$$M_{\max} = M(0) = \frac{L^2 p}{2} = 6000 \text{ lbf-ft} \quad \text{lbf-ft} \quad \text{Calc. Again}$$

$$\sigma_{\max} = \left| M_{\max} \right| \frac{c}{I} = \left| \frac{L^2 p}{2Z} \right| = 700 \text{ psi} \quad \text{psi}$$

Shear

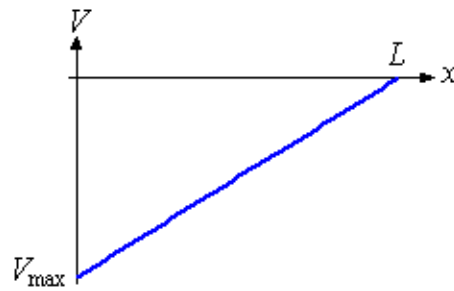

$$V(x) = -p(L - x)$$

$$V_{\max} = V(0) = -pL = -1200 \text{ lbf} \quad \text{lbf} \quad \text{Calc. Again}$$

Ads by Google

[Ultrasonic Probes for NDT](#)

Sonoscan probes for non destructive material testing!
www.sonotec.eu

[Angle steel, angle iron](#)

Export Steel Products Angle steel, angle iron
www.metal-china.cn/

[Stainless steel bending](#)

Sheet metal laser cutting, forming welding, assembling, locksmith's.
Kovoplazma.cz/en

[CAMBCO Cambering Machines](#)

The Original Machine - Since 1984 Call for a Quote!
www.cambcoinc.com

[Home](#) [Membership](#) [About Us](#) [Privacy](#) [Disclaimer](#) [Contact](#) [Advertise](#)

Copyright © 2010 eFunda, Inc.