

- Formula Home**
- **Beam Theory**
 - Euler Beam Equation
 - Symbol Definition
 - Sign Convention
- **Beam Calculators**
 - Cantilevers
 - Simply Supported
 - Mixed Supported
 - Intermediate Load
 - Uniform Load
- **X-Section Data**
 - Standard I-Beams
 - Other Shapes
- **Material Data**
 - Elastic Modulii
- **Resources**
 - Bibliography

- **Trade Publications**
 - World Pumps ★
 - Med-Tech Precision
 - appliance DESIGN
 - Pipeline and Gas Tech
 - Product Design
 - Ceramic Industry
 - more**

- ▶ **Login**

Home
Membership
Store
Forum
Search Member
Calculators

Materials

Design

Processes

Units

Formulas

Math

Sponsored Links

Ads by Google

[AS/RS for Sheet Metal](#)

Automated Storage Systems for Sheet Metal from 1000kg to 50t.
www.vollert.de

[I Beam Plate](#)

Special geometries in steel up to 15m, from producer
www.montanstahl.de


[CAD for Steel Structures](#)

ProSteel is Bentley's software for structural steel and metal work.
www.Bentley.com/ProSteel3D

[Zink- und Klebegewichte](#)

Auswuchtgewichte, Ventile, Werkzeug Reifenreparaturmaterial
www.auswuchtwelt.de

Beam Diagram and Calculator Input

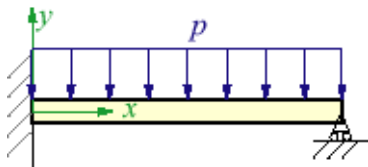

Here we display a specific beam loading case. Integrated into each beam case is a calculator that can be used to determine the maximum displacements, slopes, moments, stresses, and shear forces for this beam problem. Note that the maximum stress quoted is a positive number, and corresponds to the largest stress magnitude in the beam. It does not distinguish between tension or compression (this distinction depends on which side of the beam's neutral plane your *c* input corresponds).

Calculator Input

Length of beam, *L*:

[Line pressure load on beam, *p*](#):


[Young's Modulus, *E*](#):

Distance from neutral axis to extreme fibers, *c*:

[Moment of Inertia, *I*](#):

[Go To Solutions](#) ⇒ [Max Stress](#) [Displacement](#) [Slope](#) [Moment](#) [Shear](#)


Displacement

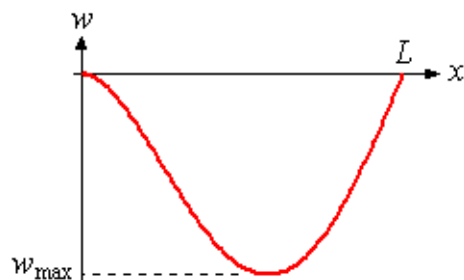

$$w(x) = -\frac{p(3L-2x)(L-x)x^2}{48EI}$$

$$w_{\max} = w(0.5785L) \approx -\frac{L^4 p}{184.6EI} = -4.04 \times 10^{-4} \text{ in}$$


Slope

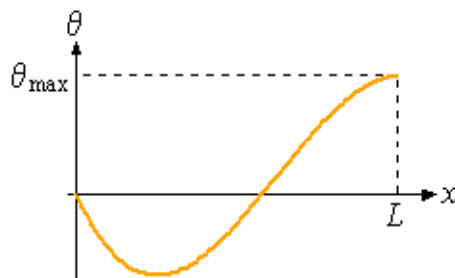

$$\theta(x) = -\frac{px(6L^2-15xL+8x^2)}{48EI}$$

$$\theta_{\max} = \theta(L) = \frac{L^3 p}{48EI} = 7.42 \times 10^{-4} \text{ deg}$$

Moment and Maximum Bending Stress

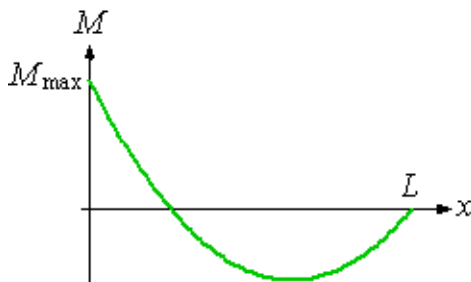


$$M(x) = \frac{1}{8} p(x-L)(4x-L)$$

$$M_{\max} = M(0) = \frac{L^2 p}{8} = 1500 \text{ lbf-ft} \quad \text{lbf-ft} \quad \text{Calc. Again}$$

$$\sigma_{\max} = \left| M_{\max} \right| \frac{c}{I} = \left| \frac{L^2 p}{8 Z} \right| = 175 \text{ psi} \quad \text{psi}$$

Shear

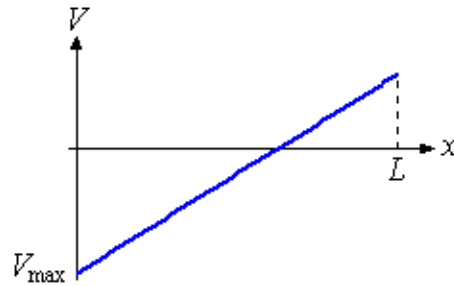

$$V(x) = -\frac{1}{8} p (5L - 8x)$$

$$V_{\max} = V(0) = -\frac{5Lp}{8} = -750 \text{ lbf} \quad \text{lbf} \quad \text{Calc. Again}$$

Ads by Google

[Cnc bending](#)

Sheet metal laser cutting, forming welding, assembling, locksmith's.
Kovoplazma.cz/en

[Force Volume Analysis](#)

Advanced force volume analysis software. Download free copy at:
www.imagemet.com

[Cable Trays - Armorduct](#)

Galvanised and Stainless Steel Cable Trays +44 (0)1384 233 445
www.armorductsystems.co.uk

[Angle steel, angle iron](#)

Export Steel Products Angle steel, angle iron
www.metal-china.cn/

[Home](#) [Membership](#) [About Us](#) [Privacy](#) [Disclaimer](#) [Contact](#) [Advertise](#)

Copyright © 2010 eFunda, Inc.